



# REGISTRATION

Pls register your product by touching +(Add product) button.

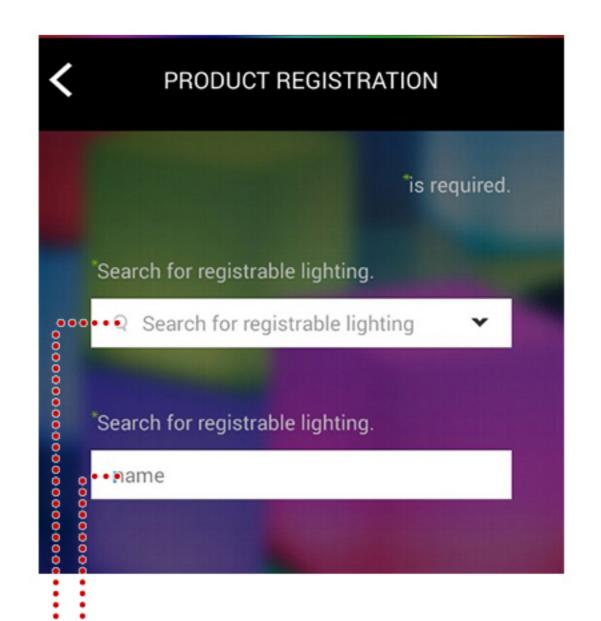

If touching this area, ONIA lamp is searched.
 After selecting the lamp,

Pls touch ADD ONIA after putting the lamp's name.

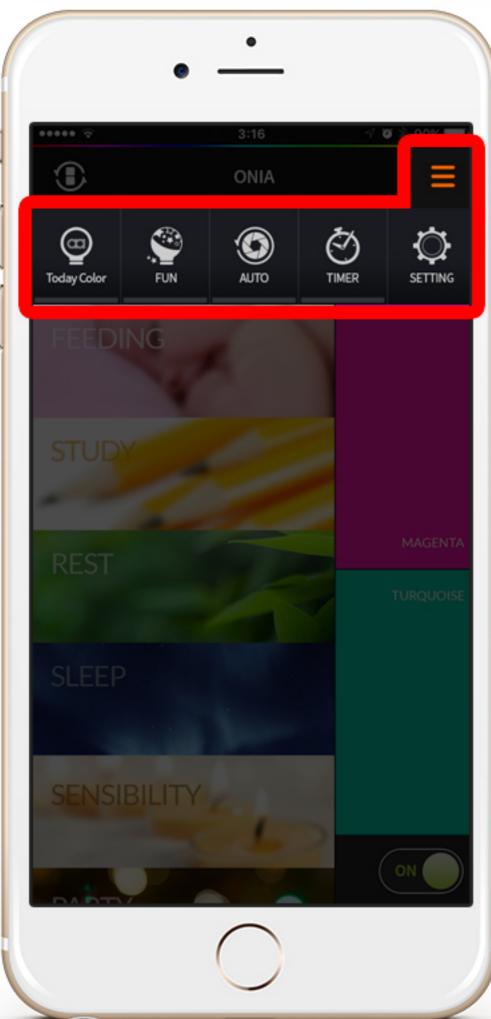


# **Function**

- If touching 'function menu' button, all menu bar is appeared below automatically.
- The colors analyzed by the data of Color Consulting and Biorhythm in SETTING are worked.
- If shaking your smartphone after touching the button, the lamp's colors are changed diversely.
- The lamp's colors are changed automatically.
- If registering the time, the lamp is automatically turned on or turned off.
- You can register your birth date for the data of Color Consulting and Biorhythm.








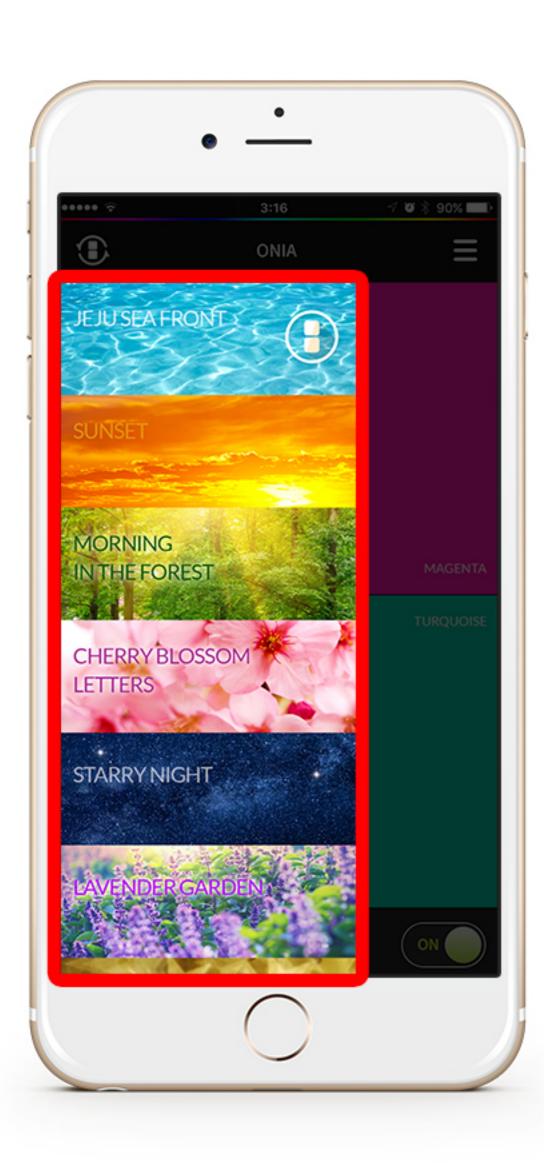


## Mode

- Life Mode: useful color combinations in daily life
- Natural Molde:Color combinations showing nature colors
  Natural Mode is not worked in ONIA Table.
- Favorite Mode: Special mode containing your favorite colors


### Life Mode

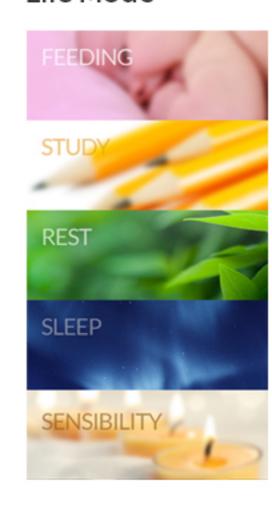

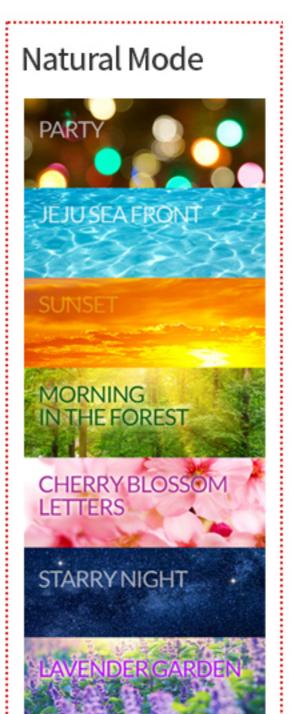

### **Favorite Mode**



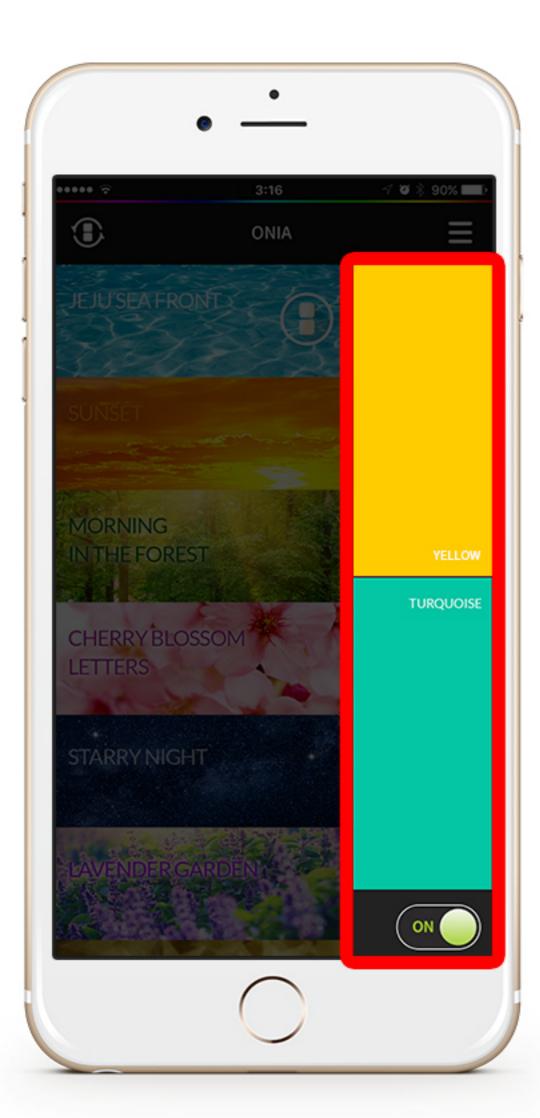

## **Color Control**

 You can turn the lamp's power on/off and you can select RGB colors you want through ONIA COLOR and COLOR PICKER.
 COLOR PICKER is not worked in ONIA Table.

### **ONIA COLOR**

